


INSTALLATION INSTRUCTIONS IN GLASS, TILES, or APPLIANCES:

PREVIOUS INSTRUCTIONS:

- Allow to temper the vinyl in the room for 24 h.
- If it not be installed in a few days, remove the vinyl tube and keep it flat.


PARTS OF DECORATIVE VINYL

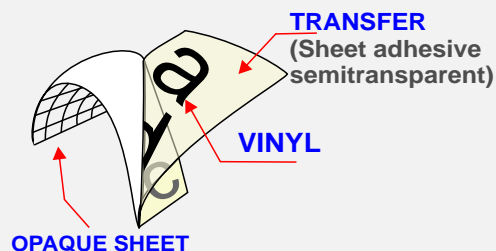

PLACEMENT OF VINYL STEP BY STEP:


STEP 1 PREPARATION OF VINYL

On a smooth surface, rub with a dry cloth vinyl in the up position, to improve adherence. If the design requires it, cut the different pieces.

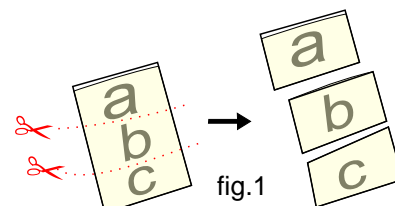

STEP 2 SURFACE PREPARATION (glass, tiles, appliances)


Clean the surface with soap and water type mistol and dry. DO NOT clean with glass cleaner, you can create a film that would prevent proper bonding. After cleaning the surface, just prior to installation, spraying or dipping the surface with water with some soap, make sure the entire surface is wet. (This will allow the vinyl to slide to ensure proper placement.)

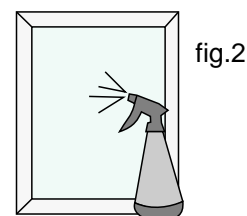

Once the preparations (steps 1 and 2), proceed to the application of vinyl.


STEP 3 APPROACH TO THE SURFACE

Separate the corners and attach to the surface. Move to the correct location. It must be possible to move, if not, wet the surface more.

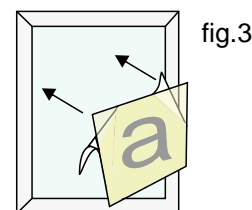


STEP 4 APPLICATION OF VINYL

Once we have the approach of the composition, has started to apply the vinyl on the wet surface. Go down removing the opaque sheet, little by little, taking into account that the vinyl has to stay with the transfer. If it stay with the opaque sheet ... back ... and re-rub to improve their grip and return to separate the sheets. To avoid wrinkles and bubbles slide the spatula from the center to the sides and down while pulling the blade is dull

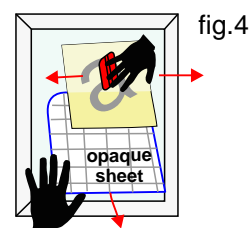

STEP 5 WATER DISPOSAL



Remove the water with the spatula or a cleaner implementation, sliding from the center outwards. Repeat for all the vinyl to make sure it has completely removed all water and all bubbles.

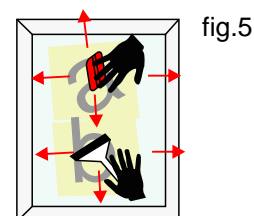

If the design requires it, repeat steps 3, 4 and 5 with all parts.

STEP 6 WAIT AND REMOVE AFTER 24 h

Leave to dry for 24 hours and remove the transfer, making sure the vinyl is glued to the surface. (if vinyl still stands, let it dry longer) Remove the transfer stretching down parallel to the surface ... never remove the transfer perpendicular stretching. If these are small bubbles will disappear within weeks. Large bubbles can be pricked with a needle and push the hole to drain the water.

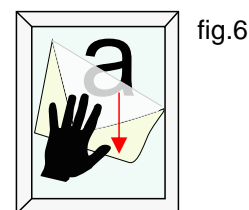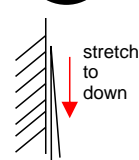

.... And now you can enjoy your DECORATIVE VINYL **Tokpersonal**