


# WALL INSTALLATION INSTRUCTIONS:

## PREVIOUS INSTRUCTIONS:

- Allow to temper the vinyl in the room for 24 h.
- Make sure the surface is clean (no dust or fat), dry and free from wrinkles. According to the finish of the wall can vary the degree of adhesion.
- If it not be installed in a few days, remove the vinyl tube and keep it flat.


## PARTS OF DECORATIVE VINYL

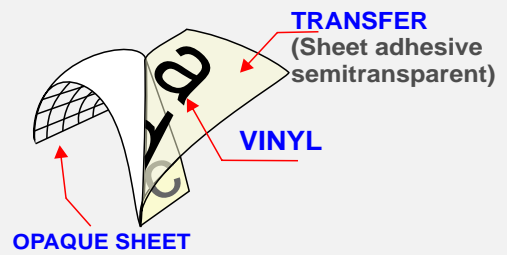

## PLACEMENT OF VINYL STEP BY STEP:


### STEP 1 PREPARATION

On a smooth surface, rub with a dry cloth vinyl in the up position, to improve adherence. If the design requires it, cut the different pieces.

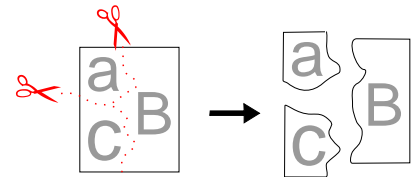


### STEP 2 APPROACH

Separate the corners and attach to the surface. Move to the correct location.

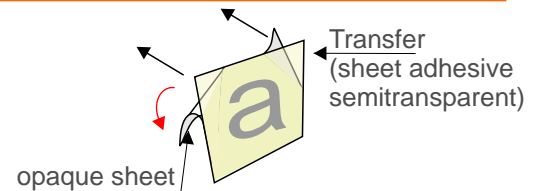

### STEP 3 STUCK

Remove the opaque sheet as it is sticking to the surface. (Vinyl has to stay with the transfer, if not back, rubbing and separating again.)

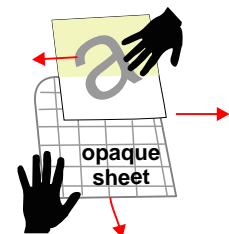

### STEP 4 RUB

Rub over the vinyl to adhere closely to the wall.




### STEP 5 REMOVE THE SHEET

Carefully remove the transfer, be sure that vinyl is securely attached to the surface. Remove the transfer parallel to the wall, do not pull forward because it would lift the vinyl. After, press onto the vinyl to ensure good adhesion.



### STEP 6 REPEAT THE ABOVE STEPS

If the design requires it, repeat the steps with the other parts of the vinyl to complete the composition.

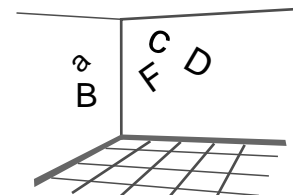

and now you can enjoy the **DECORATIVE VINYL Tokpersonal**